



Where there is electricity, there is Nader
有电有良信

www.sh-liangxin.com

Where there is electricity, there is Nader
有电有良信

NDM3系列塑壳断路器 产品说明书 NDM3 Series MCCB Product Manual

Nader 良信

上海良信电器股份有限公司
Shanghai Liangxin Electrical CO., LTD.
上海市浦东新区申江南路2000号
No.2000, South ShenJiang Road, Pudong New District
Shanghai, 201315
T/021-68586699 F/010-80115555-569675
E/liangxin@sh-liangxin.com

V2.0

Nader 良信

目 录 Contents

1.适用范围与用途/ Application scope	2
2.型号说明/ Model and implication	2
3.技术参数/ Main technical parameters	5
4.工作环境/ Stand working conditions	7
5.接线方式(接线图)/ Wiring Method	9
6.产品外形及安装尺寸/ Shape dimension & Dimension	10
7.安装方式/ Mounting Method	16
8.附件说明书/ Accessory	17
9.使用和维护/ Application & Maintenance	19
10.注意事项/ Notices	21
11.订货须知/ Accessory list and installation	22

1. 适用范围与用途/ Application scope

NDM3 系列塑壳断路器(以下简称断路器), 是本公司采用国际先进设计, 制造技术研制、开发的新型断路器之一, 按照其额定极限短路分断能力(Icu)的高低, 分为 C 型, L 型, M 型, H型, N型, S型六类。

该产品具有体积小、分断高、飞弧短, 抗震动的特点, 是陆地及船舶使用的理想产品, 其额定工作电压至 AC690V 额定绝缘电压为 1000V, 适用于交流 50/60Hz 的电路中作不频繁转换和电动机不频繁启动之用。

断路器具有隔离功能, 相应符号为: 

断路器具有过载、短路和欠电压保护功能, 能保护线路及电源设备不受损坏。

本断路器可垂直安装(即竖装), 亦可水平安装(即横装)。

本产品符合标准 IEC 60947-2、GB/T14048.2。

NDM3 series of moulded case circuit breakers(Hereinafter referred to as the MCCBs), which is one of the self-developed new generation MCCB of Nader. According to the level of the rated ultimate short-circuit breaking capacity, the breaker can be classified into four types: Type C, Type L, Type M, Type H, Type N and Type S.

The breaker possesses the features such as compactness, high breaking capacity, short arc over and anti-Vibration etc, which is the ideal product for both land and marine use. The rated working voltage is AC 690, with the insulation voltage of 1000V, will be suitable for in-frequency switching of circuits and starting of motors in 50/60Hz circuit.

The breaker has disconnecting function. The symbol of isolation is: 

The breaker has functions of overload protection, short circuit protection and undervoltage protection which can protect circuit and electrical power unit properly.

The breaker can be installed vertically(upright),as well as horizontally(crosswise).

The breaker meets the criterions: IEC 60947-2、GB/T14048.2。

2. 型号说明/ Model and implication

ND 1	M 2	3~ 3	 4	 5	 6	 7	 8	 9	 10	 11	 12	 13	 14	 15
序号 SN	序号名称 SN Name		NDM3											
1	企业代号 Enterprise code		ND: "Nader" 牌低压电器 Nader low-voltage apparatus											
2	产品代号 Product code		M: 塑料外壳式断路器 Molder case circuit breaker											
3	设计序号 Design SN		3											
4	壳架等级 Shell frame level		63、100、125、250、400、630、800、1600											
5	分断能力级别 Breaking level code		C 基本型 C: Basic type											
			L: 标准型 L: Standard type											
			M: 较高分断型 M: Less high breaking type											
			H: 高分断型 H: High breaking type											

注：1：仅NDM3-125、NDM3-250(除C型)、NDM3-400、NDM3-630 3极以及4极中性极A型和B型具有报警不脱扣功能，脱扣器代号必须为2；2：NDM3-1600仅有板前接线、联接排和板后水平接线和板后垂直接线；3：NDM3-125额定电流10A仅适用于分断能力级别C型4：4D仅适用于NDM3-125C型产品；5：NDM3-125C仅有联接排、板后接线、插入式板后接线一体式、插入式板前接线一体式。Note: 1: only NDM3-125, NDM3-250 (except type C), NDM3-400, NDM3-630 3-pole and 4-pole neutral pole type A and B have alarm non tripping function, and the release code must be 2; 2: NDM3-1600 only has front board wiring, connection row and rear board horizontal wiring and rear board vertical wiring; 3: NDM3-125 rated current 10A is only applicable to breaking capacity class C; 4: 4D is only applicable to NDM3-125C products; 5: NDM3-125C only has connection row, rear board wiring, plug-in rear board wiring and plug-in front board wiring.

		N: 基础型 N: Foundation type S: 中等分断型 S: Secondary breaking type
6	操作方式 Operation mode	无代号: 手柄直接操作 no code represents direct handle operation P: 电动操作 P: represents motor operation Z: 转动手柄 Z: represents rotary handle operation
7	极数 Pole number	3, 4
8	脱扣器代号 Release form code	0: 无脱扣器 0: represents frame only without trip unit 2: 仅有瞬时脱扣器 2: represents magnetic only 3: 复式脱扣器 3: represents both thermal and matnetic
9	附件代号 Accessory code	参见表 1 see table 1
10	用途代号 For Application code	无代号: 配电型 no code represents Power distribution 2: 电动机保护型 2: represents motor protection
11	4 极产品中 N 极(中性极)形式 N-pole type of four pole product below	A: N 极不安装过电流脱扣器, 且 N 极始终接通 A: N-pole is always close without overload release B: N 极不安装过电流脱扣器, 且 N 极与其它三极一起合分 B: N-pole is open or close together with other three poles and without overload release C: N 极安装过电流脱扣器, 且 N 极与其它三极一起合分 C: N-pole is open or close together with other three poles and with overload release D: N 极安装过载电流脱扣器, 且 N 极始终接通 D: N-pole is open or close without overload release
12	特殊用途 Special purpose	Q: 检有压自复式功能(除 NDM3-160/1600 外) Q: Self-compound function with pressure detection (except NDM3-160/1600)
13	特殊功能代号 Special function code	I: 过载报警不脱扣功能(仅 NDM3-125/250/400/630) I: The overload alarm not tripped (only NDM3-125/250/400/630)
14	额定电流 Setting current	额定电流 Setting current
15	接线方式 Cabling type	无代号: 常规产品 No code: Normal product P: 联接排 P: Extended busbar Z1: 板后接线 Z1: Rear-plate connection Z2H: 插入式板后接线 Z2H: plug-in rear-plate connection Z2Q: 插入式板前接线 Z2Q: plug-in front -plate connection Z3H: 插入式板后接线一体式 Z3H: integrated plug-in rear-plate connection Z3Q: 插入式板前接线一体式 Z3Q: integrated plug-in front -plate connection

1 表 附件代号 Table 1 Accessory Code

附件名称 Accessory Name	代号 Code
无 None	00
报警触头 Alarm contact	08
分励脱扣器 Shunt release	10
双辅助触头 Double auxiliary contact	20
单辅助触头 Single auxiliary contact	21
欠电压脱扣器 Undervoltage release	30
分励脱扣器、双辅助触头 Shunt release and double auxiliary contact	40
分励脱扣器、单辅助触头 Shunt release and single auxiliary contact	41
分励脱扣器、欠电压脱扣器 Shunt release and undervoltage release	50
二组双辅助触头 Two groups of double auxiliary contact	60
二组单辅助触头 Two groups of single auxiliary contact	61
双辅助触头、单辅助触头 Double auxiliary contact, single auxiliary contact	62
欠电压脱扣器、双辅助触头 Undervoltage release, double auxiliary contact	70
欠电压脱扣器、单辅助触头 Undervoltage release, single auxiliary contact	71
分励脱扣器、报警触头 Shunt release, alarm contact	18
双辅助触头、报警触头 Double auxiliary contact, alarm contact	28
欠电压脱扣器、报警触头 Undervoltage release, alarm contact	38
分励脱扣器、单辅助、报警触头 Shunt release, single auxiliary contact, alarm contact	48
单辅助、报警触头 Single auxiliary contact, alarm contact	58
单辅助、报警触头、双辅助触头 Single auxiliary contact, alarm contact, double auxiliary contact	68
欠电压脱扣器、单辅助触头、报警触头 Undervoltage release, single auxiliary contact, alarm contact	78

3. 技术参数/ Main technical parameters

续表 2 /Table 2 (continued)

表 2 / Table 2

型号/ Type	壳架等级额定电流/ Frame size /In (A)	额定绝缘电压/ Rated insulation voltage Ui(V)	额定工作电压/ Rated voltage Ue(V)AC	额定极限短路分断能力/ Rated ultimate breaking capacity Icu (kA)	额定运行短路分断能力/ Rated operating short circuit breaking capacity Ics (kA)	飞弧距离/ Arcing distance (mm)	额定电流/ Rated current In(A)	操作性能/ Operating cycles
NDM3-63L	63	1000	380/400/415	36	36	≤50	10,16,20,2,5,32,40,50,63	
NDM3-63M			380/400/415	55	40			
NDM3-63/4P			500	20	15			
			660/690	12	10			
			380/400/415	55	40			
	500	20	15					
NDM3-100C	100	1000	660/690	12	10		10,16,20,2,5,32,40,50,63,80,100	
			380/400/415	40	30			
			500	15	12			
			660/690	12	10			
			380/400/415	40	30			
NDM3-100/4P			500	15	12			
NDM3-125L			660/690	12	10	≤50	16 × 20 × 25, 32 × 40 × 50, 63 × 80 × 100, 125	电气寿命/ Mechanical life 8000 免维护机械寿命/ Maintenance free mechanical life 20000 可维护机械寿命/ Maintainable mechanical life 40000
			380/400/415	50	40			
			380/400/415	70	50			
			500	40	40			
			660/690	20	10			
NDM3-125H	125	1000	380/400/415	100	70	≤50		
380/400/415			50	50				
380/400/415			70	70				
500			40	40				
660/690			20	10				
NDM3-125N			380/400/415	50	50	≤50		
NDM3-125S			380/400/415	70	70			
380/400/415			70	70				
500			40	40				
660/690			20	10				
NDM3-125/4P			380/400/415	50	50	≤50		
380/400/415			70	70				
500			15	12				
660/690			12	10				
380/400/415			40	30				
NDM3-125C			380/400/415	40	40	≤50	125, 140, 160	
500			15	12				
660/690			12	10				
380/400/415			50	40				
380/400/415			70	50				
NDM3-125C/4P	160	1000	660/690	20	10	≤50		
380/400/415			70	50				
500			40	40				
380/400/415			50	40				
380/400/415			70	50				
NDM3-160L			660/690	20	10	≤50		
380/400/415			70	50				
500			40	40				
380/400/415			50	40				
380/400/415			70	50				
NDM3-160M			660/690	20	10	≤50		
380/400/415			70	50				
500			40	40				
380/400/415			50	40				
380/400/415			70	50				
NDM3-160/4P			660/690	20	10	≤50		
380/400/415			70	50				
500			40	40				
380/400/415			50	40				
380/400/415			70	50				
NDM3-250C	250	1000	400	40	35	≤50	100, 125, 140, 160, 180, 200, 225, 250	
			380/400/415	50	40			
			380/400/415	70	50			
			500	40	40			
			660/690	20	10			
NDM3-250M			380/400/415	100	70	≤50		
380/400/415			50	50				
380/400/415			70	70				
500			40	40				
660/690			20	10				
NDM3-250H			380/400/415	70	50	≤50		
NDM3-250N			380/400/415	70	50			
NDM3-250S			380/400/415	70	70			
380/400/415			70	50				
660/690			20	10				
NDM3-250/4P			500	40	40	≤50		
660/690			20	10				
380/400/415			50	40				
380/400/415			70	50				
660/690			20	10				

型号/Type	壳架等级 额定电流/ Frame size /In (A)	额定绝缘 电压 Rated insulation voltage Ui(V)	额定工作电 压/ Rated voltage Ue(V)AC	额定极限短 路分断能力/ Rated ultimate breaking capacity /Icu (kA)	额定运行短路 分断能力 Rated operating short circuit breaking capacity /Ics (kA)	飞弧距离/ Arcing distance (mm)	额定 电流/ Rated current In(A)	操作 性能 Operating cycles					
NDM3-250N/4P	400	1000	380/400/415	50	50	≤100	225, 250, 315, 350, 400						
NDM3-250S/4P			380/400/415	70	70								
NDM3-400C			380/400/415	35	35								
NDM3-400L			380/400/415	50	50								
NDM3-400M			380/400/415	70	70								
			500	50	50								
			660/690	20	15								
NDM3-400H			380/400/415	100	75								
NDM3-400/4P			380/400/415	70	70								
			500	50	50								
			660/690	20	15								
NDM3-630C			630	1000	380/400/415				35	35	≤100	400, 500, 630	电气寿命 Mechanical life 7500 免维护机械 寿命 Maintenance free mechanical life 10000 可维护机械 寿命 Maintainable mechanical life 20000
NDM3-630L	380/400/415	50			50								
NDM3-630M	380/400/415	70			70								
	500	30			30								
	660/690	20			15								
NDM3-630H	380/400/415	100			75								
NDM3-630/4P	380/400/415	70			70								
	500	30			30								
	660/690	20			15								
NDM3-800M	800	1000			380/400/415	70	70	≤100	630, 700, 800				
NDM3-800H					500	30	30						
					660/690	20	15						
			380/400/415	100	75								
NDM3-800/4P			380/400/415	70	70								
			500	30	30								
	660/690	20	15										
NDM3-1600	1600	1000	400/415	70	50	≤100	800, 1000, 1250	电气寿命 Mechanical life 10000(AC415V) 800(AC500V) 500(AC690V) 免维护机械 寿命 Maintenance free mechanical life 10000(3P) 6000(4P) 可维护机械 寿命 Maintainable mechanical life 20000(3P) 12000(4P)					
			500	50	50								
			660/690	20	20								
			380/400/415	70	50								
			500	50	50								
			660/690	20	20								

4. 工作环境/ Stand working conditions

- 1)海拔 ≤ 2500m ;
 - 2)环境温度-35 ~ +70℃ ;
 - 3)环境温度+40℃时相对湿度不超过 50%，较低温度可以有较高湿度，如：20℃时相对湿度可达 90%；
 - 4)对于因温度变化所产生的凝霜应采取相应的措施；
 - 5)能耐受潮湿空气的影响；
 - 6)能耐受盐雾、油雾的影响；
 - 7)能耐受霉菌的影响；
 - 8)断路器接至主回路的安装类别为Ⅲ类，断路器不接至主回路的安装类别为：Ⅱ类；
 - 9)污染等级：3级；
 - 10)防护等级：IP20；
 - 11)无爆炸危险的介质中，且介质无足以腐蚀金属和破坏绝缘的气体与导电尘埃的地方；
 - 12)在没有雨雪侵袭的地方；
 - 13)当用户使用条件较上述严酷时应与制造商协商；
 - 14)储存环境 见表 3；
 - 15)产品降容系数表 见表 4；
 - 16)高海拔降容系数 见表 5；
 - 17)导体部分接线端子/安装螺钉拧紧扭矩 见表 6；
 - 18)报警功能参数 见表 7
- 1) Altitude ≤ 2500m ;
 - 2) Ambient temperature: -35 ~ +70℃ ;
 - 3) The relative humidity of the air does not exceed 50% at 40℃. Higher relative humidity is permitted at lower temperature, such as 90% relative humidity at 20℃ ;
 - 4) The protective actions should be taken for frost which formed by variation of temperature ;
 - 5) Resisting the effects by humid air ;
 - 6) Resisting effects by salt mist and oil mist ;
 - 7) Resisting the effects by mould ;
 - 8) Installation category for the breaker which is connected to main circuit: Ⅲ , Installation category for the breaker which is not connected to main circuit: Ⅱ ;
 - 9) Pollution degree: 3 ;
 - 10) Protection degree: IP20 ;
 - 11) Service place without explosive media, gas and dust which are corrosive and conductive ;
 - 12) Be mounted free from rain and snow ;
 - 13) Should consult with the manufacturer when the working conditions are harsher ;
 - 14) Storage environment table 3 ;
 - 15) Product derating coefficient table table 4 ;
 - 16) Derating coefficient in high altitude place table 5 ;
 - 17) Terminal torsion value for wiring thread hole in conductor section table 6 ;
 - 18) Parameters of alarm function table 7 ;

表 3/ table3

项目 Item	规范 Description
周围温度 Ambient temperature	-40℃ ~ +75℃
相对湿度 Relative humidity	(Ambient temperature at 25℃) ≤ 95%

表 4/ table4

塑壳式断路器降容系数表 Molded Case Circuit Breaker Derating Coefficient Table

序号 No.	壳架等级 额定电流(A) Frame size rated current(A)	温度对应产品降容系数表 Derating coefficient table						
		40℃	45℃	50℃	55℃	60℃	65℃	70℃
1	125	1	0.977	0.954	0.931	0.907	0.883	0.858
2	250	1	0.982	0.963	0.944	0.924	0.904	0.882
3	400	1	0.981	0.962	0.942	0.922	0.901	0.879
4	630	1	0.979	0.958	0.937	0.915	0.893	0.871
5	800	1	0.980	0.960	0.939	0.918	0.897	0.877
6	1600	1	0.960	0.920	0.870	0.820	0.760	0.700

表 5/ table5

塑壳断路器高海拔降容系数表

Molded Case Circuit Breaker Derating Coefficient Table in High altitude Place

海拔高度(m) Altitude(m)	2000	2500	3000	3500	4000	4500	5000
工作电流修正系数 Rated working current	1	1	0.98	0.97	0.95	0.94	0.93
最大工作电压(V) Maximum working voltage(V)	690	690	620	580	550	520	500
工频耐压(V) Power frequency withstand voltage(V)	3500	3500	3150	3000	2800	2650	2500
绝缘电压(V) Isolation voltage(V)	1000	1000	900	850	810	770	730

表 6/ table6
接线端子/安装螺钉拧紧扭矩 Torsion value for wiring terminal

序号 No.	壳架等级额定电流(A) Frame size rated current	螺纹直径(mm) Thread diameter	扭矩(N.m) Torsion value
1	63/100	M8	12
		M3	1
		M8	12
2	125/160/250	M4	1.5
		M10	20
3	400	M6	6
		M12	28
4	630/800	M6	6
		M10	20
5	1600	M5	4

表 7/ table7
报警功能参数 parameters of alarm function

名称 Name		过载报警不脱扣模块 Overload alarm non-tripping module
电压规格(V)/约定发热电流(Ith) Voltage specifications(V)/ Conventional thermal current(Ith)		AC250V/10A
状态示意图 State diagram	报警 Alarm	
	非报警 Non-alarm	

5. 接线方式(接线图)/ Wiring Method

连接导线采用的截面积和相对应的额定电流见表 8
Table 8 of sectional area and applicable rated current adopted in wiring

额定电流(A) Rated current(A)	10	16	25	32	40	63	80	100	125	160	180	200	250	315	400
导线截面积 Wire sectional area(mm²)	1.5	2.5	4.0	6.0	10	16	25	35	50	70	95	120	185	240	

额定电流(A) Rated current(A)	电缆线截面积 Cable cross-sectional area		铜排尺寸 Copper bar size	
	数量 Quantity	截面积(mm²) Cross-section area(mm²)	数量 Quantity	尺寸 (mm×mm) Cross-section area(mm×mm)
500	2	150	2	30x5
630	2	185	2	40x5
700、800	2	240	2	50x5
1000	-	-	2	50x6
1250	-	-	2	50x8

6. 产品外形及安装尺寸/ Shape dimension & Dimension

本产品可板前接线，也可板后接线，具体见图 1、图 2

This product can also be front plate connector, wiring on back of the board, specific see Figure 1, figure 2


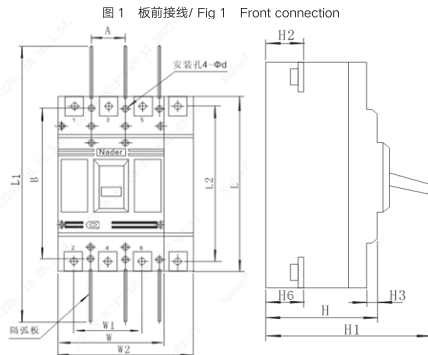


图 1 板前接线/ Fig 1 Front connection
图 2 板后接线/ Fig 2 Rear connection

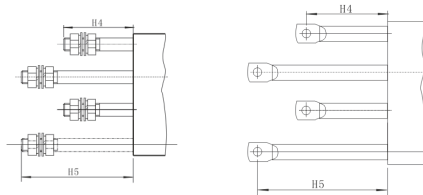

NDM3-63~250

NDM3-400~800

表 9/ Table 9

型号 / Table	外形尺寸 / Dimensions													安装尺寸 / Mounting dimensions		
	外形尺寸 / Dimensions															
	外形尺寸 / Dimensions															
	外形尺寸 / Dimensions															
W		W1	L	H	W2	L1	H1	H2	H3	H6	L2	H4	H5	A	B	d
NDM3-25(L/M /100C)		50	130	65.1	-	-	81	-	8.8	24.5	116	66.5	102.5	25	111	3.5
NDM3-63(L /100 /4P)		-				100										
NDM3-125(L)		92		69			100									
NDM3-150(L /4 /X /S)		60	150	87.5		250	120	24	7	-	132	53	73	30	129	4.5
NDM3-150/4(X /S)		-				122										
NDM3-125C		75	130	66.1		232.8	81	-	8.8	24.5	118	60.5	102.5	25	111	3.5
NDM3-150C/4P		-				100										
NDM3-160C			139	75.3			106	22		22	121				118	
NDM3-160(L)		60				-						66	91.5	30		4.5
NDM3-160H		92	150	74.3			107				132				129	
NDM3-160H /4P		-		92.3	122		124	28	10.3	28						
NDM3-250C		105														
NDM3-250(L /4 /X /S)				67	-	-	88						-		126.6	
NDM3-250/4(X /S)		107	165	88	-	295	122.5	24	7	24	144	58	78	35	126	5
NDM3-250/4(X /S)		-		105		142										

续表 9/ Table 9(continued)


型号 / Table	外形尺寸 / Dimensions													安装尺寸 / Mounting dimensions		
	板前连接 / Front connection															
	板后连接 / Rear connection															
	W	W1	L	H	W2	L1	H1	H2	H3	H6	L2	H4	H5			
NMB-400C(L)	150	96	237	107	-	473	151	38	1.0	-	224	42	82	44	194	7
NMB-400H/4P				198												
NMB-400C(L)	182	116	270	111	-	486	153	43	1.0	43	234	44	88	58	200	7
NMB-400H/4P				240												
NMB-400C(L)	210	140	280	113.5	-	496	162	40	10.5	43	243	33	98	70	243	7
NMB-400H/4P				280												
NMB-400C(L)	210	140	288	160	-	200	24	6	-	237	61	61	70	245	6	
NMB-400H/4P				280												

注：未注公差尺寸的极限偏差按 GB/T 1804-c。
Note: The limit deviation not indicated with the tolerance dimensions is as per GB/T 1804-c.

6.1 安装在金属小柜中的绝缘距离(单位: mm), 如下图:

6.1 Insulation distance mounted in the metal cabinet (unit: mm), as shown below:


安装距离 Mounting distance	A(进线端到柜面) A (inlet wire end to the cabinet face)		B(侧面到柜面距 离) B (distance from side to cabinet)	C(出线端到柜面距离) C (outlet wire end to the cabinet face)
	带端子罩 With a terminal cover	不带端子罩 Without a terminal cover		
型号 Specification				
NDM3-63	25	65	30	30
NDM3-100	25	65	30	30
NDM3-125	25	65	30	30
NDM3-160	25	65	30	30
NDM3-250C	25	65	30	30
NDM3-250	25	65	30	30
NDM3-400	25	120	35	35
NDM3-630	25	120	35	35
NDM3-800	25	120	35	35
NDM3-1600	25	110	35	35

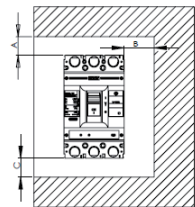

6.2 断路器排装之间的最小中心距离

6.2 Minimum center distance between rowed circuit breakers


型号 Specification	断路器宽度(mm) Width of circuit breaker (mm)		中心距离(mm) Center distance (mm)	
	3极 3P	4极 4P	3极 3P	4极 4P
NDM3-63	75	100	105	130
NDM3-100	75	100	105	130
NDM3-125	92	122	122	152
NDM3-160	92	122	122	152
NDM3-250C	105	/	140	/
NDM3-250	107	142	137	172
NDM3-400	150	198	190	238
NDM3-630	182	240	222	280
NDM3-800	210	280	250	320
NDM3-1600	210	280	250	320

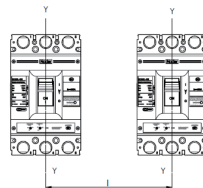

6.3 断路器叠装之间最小距离

6.3 Minimum center distance between stacked circuit breakers

型号 Specification	H(断路器上下距离) H (distance of circuit breaker from bottom)	
	带端子罩 With a terminal cover	不带端子罩 Without a terminal cover
NDM3-63	90	90
NDM3-100	90	90
NDM3-125	90	91
NDM3-160	90	91
NDM3-250C	90	93
NDM3-250	90	93
NDM3-400	155	155
NDM3-630	155	155
NDM3-800	155	155
NDM3-1600	/	155

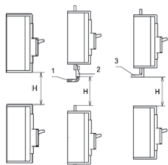

注：1 绝缘电缆

2 电缆端子

3 连接-无绝缘

产品通电前检查端子罩或相间隔板装配到位。

Note: 1. Insulated cable

2. Cable terminal

3. Connection - on insulation

Check whether the 0 arcing cover or phase partition is assembled properly before

7. 安装方式/ Mounting Method

7.1 绝缘测试

本断路器出厂前已按标准规定绝缘测试。安装前如进行复测，必须按如下步骤：

① 用 500VDC 兆欧表

② 在断路器处于断开状态，对进出连接板 1-2、3-4、5-6 之间，和 1、3、5 连接板与外壳之间(外壳用金属箔覆盖)分别进行。

③ 对接至主电路的欠电压脱扣器，在进线与断路器外壳间。

④ 绝缘电阻不小于 20MΩ。

7.2 安装

请安装在金属阻燃物上，断路器可垂直安装，也可以水平安装。

7.1 Insulation test

Insulation test has been already carried out on the breaker according to standard before leaving factory. Due to wire circuit, the following steps should be operated if insulation test is carried out on the breaker again.

① 500VDC megger

② When breaker is broken up, insulation test is conducted separately between connecting panels 1-2, 3-4, 5-6, connecting panels 1, 3, 5 and shell.

③ Undervoltage tripper connected to the main circuit is arranged between intake wire and breaker shell.

④ Insulation resistance is not less than 20MΩ.

Notes: Insulation test could be operated after wire circuit is separated.

7.2 Install

Installed on metal or other flameproof material in vertical or horizontal mode.

垂直安装
Vertical水平安装
Horizontal

8. 附件说明书/ Accessory

 
8.1 欠压脱扣器

断路器带有欠压脱扣器时，应使欠电脱扣器先通电，断路器才允许合闸。

根据外挂欠电压模块上的接线端子编号接入电源(直流电源不必区分正负极)

当电源电压下降到欠压脱扣器额定工作电压的 70% ~ 35%

范围内时，欠压脱扣器能可靠的分断断路器；当电源电压低于欠压脱扣器额定工作电压的 35% 时，欠压脱扣器能防止断路器闭合；当电源电压高于欠压脱扣器额定工作电压的 85% 时，欠压脱扣器能保证断路器可靠闭合。



欠压脱扣器接线图

Wiring diagram of under-voltage release

8.1 Undervoltage tripper

When the breaker has an undervoltage tripper, the undervoltage tripper should be electrified, and then the breaker allows switch on.

Power supply is accessed according to wiring connector number on the external undervoltage module (anode and cathode of DC power supply are not differentiated).

When power voltage declines to 70% ~ 35% of the rated working

Voltage of undervoltage tripper, the undervoltage tripper can reliably break the breaker up; when power voltage is lower than the rated working voltage of undervoltage tripper by 35%, the undervoltage tripper can prevent the breaker from closing; when power voltage is higher than the rated working voltage of undervoltage tripper by 85%, the undervoltage tripper can guarantee the reliable closure of breaker.

8.2 分励脱扣器

根据引出的导线编号接入电源(直流电源不必区分正

负极)。当分励脱扣器的外加电压介于额定控制电源电压的 70%~110% 之间时，能可靠分断断路器。

8.2 Shunt tripper

Power supply is accessed according to wiring connector number on the external undervoltage module (anode and cathode of DC power supply are not differentiated). When impressed voltage of shunt tripper is between 70% and 110% of rated control power voltage, the breaker can be reliably broken.



分励脱扣器接线图

Wiring diagram of shunt tripper

8.3 辅助触头、报警触头

8.3.1 辅助、报警触头接入相应外围控制电路

8.3 Auxiliary contact, alarm contact

8.3.1 Auxiliary and alarm contacts accessed into relative external control circuit/

分类 Category	壳架电流(A) Frame current (A)	约定发热电流 Ith(A) Conventional thermal current Ith (A)	额定工作电流 Ie(A) Rated working current Ie(A)
辅助触头 Auxiliary contact	63-250	3	0.3(AC400V)/0.15(DC220V)
	400-1250		0.4(AC400V)/0.15(DC220V)
报警触头 Alarm contact	63-250	3	0.3(AC400V)/0.15(DC220V)
	400-1250		0.4(AC400V)/0.15(DC220V)

8.3.2 辅助、报警触头状态指示图

8.3.2 Status indicator diagrams of auxiliary and alarm contacts


附件名称 Accessory Name	断路器状态 Status of breaker	线路接通状态 Connection status of circuits
辅助触头 Auxiliary contact	“分”或“自由脱扣” Breaking or free tripping	
	“合” Closing	“接通”与“断开”相互转换 Switchover between closing and opening
报警触头 Alarm contact	“分”或“合” Breaking or closing	
	“自由脱扣” Free tripping	“接通”与“断开”相互转换 Switchover between closing and opening

8.4 电动操作机构

在外加电源情况下，可通过电动操作机构对断路器进行合、分操作。

8.4 Motor-operated mechanism

The breaker can be closed and opened by an motor-operated mechanism in the condition of external power supply.

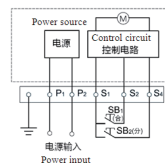

电动操作机构接线图

Wiring diagram of motor-operated mechanism

8.5 手动操作机构

8.5.1 安装前，安装操作手柄的开关柜门按图开好孔，开孔

中心离铰链距离大于 200 mm。

8.5.2 把已在面盖上固定好操作机构的断路器安置于安装板上，并稍作固定。

8.5.3 把操纵杆方轴固定于操作机构上安置方轴的方孔内。

8.5.4 关上开好孔的门板，调整断路器的位置，使方轴中心与手柄开孔中心一致。

8.5.5 打开开关柜门板，当转动手柄“OFF”指示在水平位置时固定好手柄。

8.5.6 合上安装好转动手柄的开关柜门板，试着操作手柄，转动应灵活自如，并且手柄在水平位置时，断路器应分闸，手柄在垂直位置时，断路器应合闸。

8.5 Manual operating mechanism

8.5.1 Before installation, a switch cabinet door for installing

operating handle is holed in accordance with the diagram.

Distance between the holed part and the hinge is greater than 100 mm.


8.5.2 The breaker with an operating mechanism fixed on cover is installed on the installation panel and slightly fixed then.

8.5.3 The square shaft of an operating rod is fixed in a square hole on the operating mechanism.

8.5.4 The holed door plank is closed and position of the breaker is adjusted so that centers of the square shaft and the handle hole are aligned.


8.5.5 The switch cabinet door is opened. The rotary handle is fixed until “OFF” is at the horizontal position.

8.5.6 The switch cabinet door equipped with rotary handle is closed. The handle should be operated freely. The breaker should be opened when the handle is at the horizontal position, and it should be closed when the handle is at the vertical position.

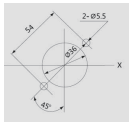


CS1-A 型手柄开孔图

CS1-A type holeing diagram of handle

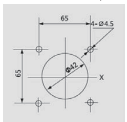


CS1-F 型手柄开孔图

CS1-F type holeing diagram of handle

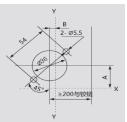

CS2-A 型手柄开孔图

CS2-A type holeing diagram of handle

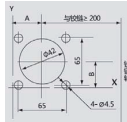

CS2-F 型手柄开孔图

CS2-F type holeing diagram of handle

9. 使用和维护 / Application & Maintenance

9.1 运行前检查和准备

运行前应检查以下各项

(1) 核对接线是否正确，见第 7 点接线方式图。

(2) 确认端子间或暴露的带电部分没有短路或对地短路情况。

(3) 确认端子连接和固定螺钉均应紧固无松动

(4) 断路器带有欠电压脱扣器，应使脱扣器先通电，断路器才允许合闸。

9.1 Examination and preparation before working

The following items should be examined before working

(1) Check whether wiring is right; see the seventh wiring diagram.

(2) Make sure that there is no short circuit on the part between every two terminals or on exposed

electrified parts or no short circuit. to earth.

(3) Make sure terminal connection and fixing screw are fastened.

(4) If the breaker has an undervoltage tripper, the breaker is allowed to close only when the undervoltage tripper is electrified.

9.2 试运行 Pilot run

按 9.1 条各项全部确认无异常情况后，可以进行试运行。

(1) 扳动操作手柄，投入电源。

(2) 断路器主电路带电后，按紧急脱扣按钮，断路器应脱扣，操作手柄处于脱扣位置。如果试运行都能满足，可投入运行。

Carry out pilot run after all items in rule 9.1 are assured normal.

(1) Pull the operating handle and switch power supply on.

(2) Press emergency release button after main circuit of the breaker is electrified. Then, the breaker should be released and the operating handle is at released position. Operation can be carried out if pilot run successes.

9.3 维护 Maintenance

◆ 维护检查必须有专业技术人员负责。

◆ 用户如需选用内、外附件，按所订型号由本公司提供，以保证质量。如用户自行选购或改装，本公司不能负责。

◆ 在执行维护操作前，必须先完成下列操作：

(1) 使断路器分闸；

(2) 断开电源与断路器的连接(包括主电路、辅助电路)

(3) 将断路器从安装位置上卸下(一般用于插入式，固定式最好也如此)。

断路器维护在正常操作条件下每年一次，在非正常条件下每半年一次，以下为维护内容：

(1) 再扣断路器，合、分断路器，在断路器合闸时用脱扣按钮使断路器脱扣，往复操作 5 次，断路器应能可靠进行再扣、合、分、脱扣动作；

(2) 清除断路器表面及连接处的灰尘(用清洁、干燥的抹布擦拭)；

(2) 清除断路器表面及连接处的灰尘(用清洁、干燥的抹布擦拭)；

(3) 清洁隔弧板，如必要则需要更换隔弧板；

(4) 检查所有连接情况，用砂布擦除氧化物，用可溶解剂清洁，拧紧螺栓和螺母；

(5) 如果断路器还装有其它内、外附件，应逐一检查各个附件，以确保其处于正常工作状态。

(按照 8 附件说明详细内容进行测试)

◆ Maintenance and check should be finished by professional technicians.

◆ To guarantee quality, the company provide internal and external accessories to customer according to the subscribed type. The company is free from responsibility if the customer purchases or refits internal and external accessories by himself.

◆ The following operations should be finished before maintenance.

(1) Open the breaker.

(2) Disconnect power supply and the breaker (including main and auxiliary circuits);

(3) Uninstall the breaker from the installing position (suitable for insertion type, so as fixation type).

Maintenance on the breaker should be carried out once every year in normal operation condition or once every half a year in an abnormal condition. The followings are included in

maintenance.

(1) Fasten, close and break the breaker. Release the breaker by a release button when it is closed.
The breaker should be fastened, closed, broken and released reliably again after the above operations are carried out for five times;

(2) Remove dust on the surface and connection part of the breaker (by clean and dry cloth);

(3) Clean flash barrier, and exchange it if necessary;

(4) Check all connections; wipe oxide off by abrasive cloth; clean by dissoluble lotion; tighten the bolt and nut;

(5) If there are other accessories installed on the breaker, all accessories should be examined one by one to make sure normal working condition.

(test in according to details in Accessory 8)

10. 注意事项/ Notices

10.1 安装注意事项

(1) 断路器本体、底座(板后接线用)、底座(插入式接线用)固定在安装板上。

(2) NDM3ZB 断路器内部线路板上有储能元件带电, 请勿自行拆开, 以免触电。需要是请于厂家联系。电源进线端两极禁止进行绝缘测试。

(3) 与主电路连接

3.1 必须由具有专业资格的人员进行配线作业。

3.2 确认输入电源处在完全断开的情况下, 才能进行配线作业。

3.3 必须安装本体后再进行配线。

3.4 断路器配线必须符合上进下出, 即 1,3,5 端子接电源线, 2,4,6 端子接负载线, 允许倒进线

10.1 Installation precautions

(1) Main body, baseboard (for back-panel wire connection), base (for insertion wire connection) of the breaker are fixed on an installation panel.

(2) An energy storage element on the internal circuit board of the NDM3ZB breaker is electrified, please do not open it by yourself. Please contact the manufacturer if necessary. Insulation test is forbidden at two ends of the intake terminal of power supply.

(3) Connected to main circuit.

3.1. Wiring operation should be carried out by professional technicians.

3.2. Wiring operation should be carried out only when input power supply is assured completely broken.

3.3. Wiring operation should be carried out after the main body is installed.

3.4. In wiring operation of the breaker, wire should be inserted from the top and pulled out from the bottom; that is to say, terminals 1,3,5 are connected to power wire, and terminals 2,4,6 are connected to load wire; wiring sequence is allowed to be exchanged.

10.2 运行注意事项

(1) 湿手不能操作断路器, 否则可能发生电击事故。

(2) 断路器不能频繁操作, 否则会缩短断路器的使用寿命。

(3) 带电动操作机构的断路器脱扣跳闸后, 电操机构必须使断路器再扣, 然后才能合闸。

10.2 Running precautions

(1) Wet hand is forbidden to operate the breaker, otherwise there is electric shock hazard.

(2) The breaker cannot be operated frequently, otherwise its service life is shortened.

(3) If there are release and tripping operation occurred on the breaker with an motor-operated mechanism, the breaker only can be closed after the motor-operated mechanism fastened it again.

10.3 保修期与售后服务

本产品是在完善的品质管理体系下制造的, 当万一发生故障时, 对保修期与售后服务特作如下说明:
保修期

在用户遵守保管和使用条件下, 从本公司发货之日起, 不超过 18 个月, 断路器封印完好, 产品如因制造质量问题而发生损坏或不能正常使用时, 本公司负责无偿修理或更换。但是, 如由于下述原因引起的故障, 即使在保修期内亦作有偿修理或更换。

(1) 由于使用错误、自行改装及不适当的维修等原因。

(2) 超过标准规范的要求使用。

(3) 购买后由于摔落及安装过程中发生损坏等原因。

(4) 地震、火灾、雷击、异常电压、其他天灾及二次灾害等原因。

售后服务

(1) 出现故障时, 请与供货商或本公司售后服务部门联系。

(2) 保修期内的修理或更换: 由于本公司制造上的问题所造成的故障, 作无偿修理, 以至更换。

(3) 超过保修期后的修理或更换: 在修理后能维持功能的场合下, 作有偿修理, 否则可作有偿更换。

10.3 Warranty period and after-sales service

This product is manufactured in a fine quality management system. In case of error, warranty period and after-sales service are explained in the followings:

Warranty period

The company is responsible for free maintenance or exchange within 18 months from the delivery date at the following premises: the user abides by preservation and use rules; seal on the breaker is complete; the product is damaged or cannot be used normally by reason of quality problem. However, maintenance or exchange should be paid in warranty period if the error is caused by any one of the following reasons:

(1) Improper use, self refit, improper maintenance and so on.

(2) Use out of the standard specification.

(3) Damage caused by falling off or installation after purchase.

(4) Earthquake, fire disaster, lightning stroke, abnormal voltage, other natural disaster, second disaster and so on.

After-sales service

(1) Please contact the supplier or the after-sales service department of company if there is an error.

(2) Maintenance or exchange in warranty period: free maintenance or exchange is allowed if the error is up to manufacture technique.

(3) Maintenance or exchange out of warranty period: paid maintenance is operated if the function can be recovered, otherwise paid exchange is operated.

11. 订货须知/ Accessory list and installation

用户务必确认对本产品技术资料已有详细了解, 并应根据断路器将来使用的场合, 按“订货规范”表订货。

Customer should have a knowledge of technical documents of this product and maker order by an “Ordering rule” table in accordance with the future practical use of breaker